

Smart Attendance: How to change settings

User can change the settings of their smart attendance device using SMS. The table below lists the commands used for accessing & changing settings.

SET SRVIP 1 <URL>	Sets cloud server IP (See Note 1)
SET SRVPORT 1 <PORT>	Sets Server Port
SET RID	Set Reader ID (See note 2)
SET APK <APK>	Set Application User ID (See note 2)
SET LOGIN pass123	Login with password "pass123"
SET LOGOUT	Log Out from settings mode
SET PASS <new password>	Change User Password (See note 3)
GET SRVIP 1	Get Server Address from system
GET SRVPORT 1	Get Server Port from system
GET APK	Get App Key from system
GET RID	Get Reader ID from system
SET/GET EPU	Set/Get the endpoint for transaction upload
SET/GET EPT	Set/Get the endpoint for date time sync
GET IMEI	Get IMEI number of GPRS Module
GET STAT	Get Status info like Firmware Version, IMEI, Date, Time, Server URL & Port Number

NOTE:

1. While Entering Server URL, DO NOT add "http://" to the URL. For example if the URL is <http://timemuster.com>, user must enter URL as "timemuster.com"
2. Maximum length for setting "RID" & "APK" is 8 Alphanumeric Characters
3. Maximum length for New Password is 8 Alphanumeric Characters

Instructions for Using the Commands

1. All commands must be in CAPITAL LETTERS, as shown above
2. User must Log In with "SET LOGIN <Password>". Device will respond with "Login OK" message.
3. If User does not send any message for 2 minutes after logging in, device will automatically log out.
4. Device will only accept commands from the Phone Number that has sent the "Login" command.
5. **Default Password is "pass123"**